

Frost | Productions

LP 612

Quick Reference Programming Guide

Clearing Patch:

- 1) Press the **PRESET** menu button. Repeat key press until the **PATCH** LED is lit.
- 2) Press the **DOWN** arrow until the label **CL**, appears on the display. The red record LED will blink.
- 3) While the LED is blinking, press the **RECORD** key.
- 4) While the display is blinking, press **RECORD** again to clear all presets.
- 5) The board will verify the operation by displaying **dE** (default Erase) for a few seconds. The patch will now be initialized to a 1:1 patch for 12 dimmers.

Patching Dimmers:

- 1) Press the **PRESET** menu. Repeat key press until the **PATCH** LED is lighted.
- 2) The **dF** display indicates the default patch of 1:1 is in effect.
Press the **UP** arrow next to the display
- 3) The **2 digit** display now shows the active dimmer number, which can be changed by the **UP** and **DN** arrows
- 4) The channel assigned to the active dimmer channel is indicated by the output LED indicator located above each board channel.
- 5) To assign the active dimmer channel to another board channel, press the **BUMP** button of the new channel. The LED for the previously assigned board channel will go out, and the LED for the new board channel will be lighted.
- 6) To clear a dimmer assignment, press the bump button of the lighted channel. The bump button will toggle the channel to an off state.

Clearing Presets

- 1) Press the **PRESET** menu button. Repeat key press until the **PAGE** LED is lighted.
- 2) Press the **DN** arrow to display **CL** appears on the display. The red record LED will begin to blink.
- 3) While the LED is blinking, press the **RECORD** key.
- 4) The board will verify the operation by displaying **PE** (Preset Erase) for a few seconds.

Programming Preset Memories

- 1) Press the **PRESET** menu key to light the **PAGE** LED.
- 2) Use the display **UP** and **DN** keys to select a page number of 1 through 4.
- 3) Press the **RECORD** button.
- 4) Set the stage look using the X scene channel faders.
- 5) Press the **BUMP** button beneath the desired preset fader.
- 6) When finished recording, press the **RUN** key.

LP 612

Quick Reference Programming Guide

Clearing Chases:

- 1) Press the **CHASE** button. Repeat key press until the **PATTERN** LED is lighted.
- 2) Press the **DN** arrow until the label **CL** appears on the display. The red **RECORD** LED will begin to blink.
- 3) While the LED is blinking, press the **RECORD** key.
- 4) While the display is blinking, press **RECORD** again to clear all presets.
- 5) The board will verify the operation by displaying **CE** (Chase Erase) for a few seconds.

Programming Chases:

- 1) Press the **CHASE** button to light the **PATTERN** LED
- 2) Set the pattern display to one of the patterns 5 to 11.
- 3) Press the **CHASE** menu button a second time to enter **STEP** mode.
- 4) Press the **RECORD** button.
- 5) Set the channels of the Chase step using the bump buttons or X scene faders.
- 6) Press the **UP** key to advance to record and advance to the next step.
- 7) Repeat for all steps
- 8) When finished, press the **RUN** key to end programming.

Clearing Cue Stacks:

- 1) Press the **STACK** button. Repeat key press until the **NOW** LED is lighted.
- 2) Press the **DN** arrow until the label **CL** appears on the display. The red **RECORD** LED will begin to blink.
- 3) While the LED is blinking, press the **RECORD** key.
- 4) While the display is blinking, press **RECORD** again to clear all presets.
- 5) The board will verify the operation by displaying **SE** (Stack Erase) for a few seconds.

Programming Stack Presets

- 1) Press the **STACK** button to display **NOW** scene. Use the **DN** key to set now to --
- 2) Press the **STACK** menu key again to light the **NEXT** LED.
- 3) Use the **UP** and **DN** keys to select a cue number of 1 through 50.
- 4) Set levels on stage using manual channels or Presets.
- 5) Press the **RECORD** key once. The **RECORD** LED will begin to blink.
- 6) Press **RECORD** again to store the cue and advance to the next.
- 7) Continue setting and recording cues.
- 8) Press **RUN** key to end recording.
- 9) While in **NEXT** Mode use arrow buttons to call up the first cue for playback.
- 10) Use the **STACK FADER** to manually crossfade between cues or the **GO** button to timed fade to next cue.