

## Well Flex Settings Wireless DMX Setup

Press **Power Button** push and hold to turn on or off. (Button to the far right and up)  
Press **Menu** Once  
Press **Up or Down** Until Display reads **Wireless Setting**  
Press **Enter**  
Press **Down** Until Display reads **Reset**  
Press **Enter** and let flash a few seconds  
Press **Enter**  
Press **Up** until Display reads **Receive** (Make sure it says **On**)  
Press **Menu**  
Press **Down** until Display Reads **Master/Slave**. Should Say **<Slave>**  
Press **Down** until Display Reads **DMX Channel**. We use **4** or **6** channel mode.  
To Change Press **Enter** and then **up or down** to set mode and then press enter again.  
Press **Down** until Display Reads **DMX Address**  
Press **Enter** to set  
Press **Up or Down** to set Address.  
Press **Enter**

**On Transmitter**  
Press **Red Button** to Sync lights

*If you have issues with Syncing Fixtures Turn Go Wireless settings, Turn Receive Off, Power off unit, power back on and turn receive on and follow wireless dmx set up.*

## Slave Adjustments

Does not act as a Master unit.

### To set up slave (Do this First)

Press **Menu** Once  
Press **Up or Down** Until Display reads Wireless Setting  
Press **Enter**  
Press **Down** Until Display reads **Reset**  
Press **Enter** and let flash a few seconds  
Press **Enter**  
Press **Up** until Display reads **Receive** (Make sure it says **On**)  
Press **Menu**  
Press **Down** until Display Reads **Master/Slave**. Should Say **<Slave>** \

**Go to Master Unit Make master and press button to sync.**

## Well Flex Settings Stand Alone Modes

To be used in Master/Slave Modes Must Be Paired First

### Auto Show

Press **Menu** Once  
Press **Up or Down** Until Display reads **Auto Show**  
Press **Enter**  
Press **Up or down** to select Show (1-4)  
Press **Enter**  
Press **Up or Down** to select Speed (1-100)  
Press **Enter** **Again**

### Static Color Fixed Color Mode

Press **Menu** Once  
Press **Up or Down** Until Display reads **Static**  
Press **Enter**  
Press **Up or Down** until Display reads **Fixed Color**  
Press **Enter**  
Press **Up or Down** to select Desired Color  
Press **Enter**

### Custom Color

Press **Menu** Once  
Press **Up or Down** Until Display reads **Static**  
Press **Enter**  
Press **Up or Down** until Display reads **Manual Color**  
Press **Enter**  
Press **Up or Down** until R, G, B, or W  
Press **Enter**  
Press **Up or Down** to Set Set Color Level  
Press **Enter**  
Follow Steps 6-9 for all colors until desired color reached  
Press **Enter** after last color.